

Quick Start Guide

Toolless Shielded Cat6/6a Keystone Jack

Models: N238-001-SH-TF, N238-001-SH-TFA

Este manual esta disponible en español en la página de
Tripp Lite: www.tripplite.com/support

Ce manuel est disponible en français sur le site Web de
Tripp Lite : www.tripplite.com/support


Русскоязычная версия настоящего руководства
представлена на веб-сайте компании Tripp Lite по
адресу: www.tripplite.com/support




1111 W. 35th Street, Chicago, IL 60609 USA • www.tripplite.com/support

Copyright © 2018 Tripp Lite. All rights reserved.


- 1** Remove approximately 30 mm of cable sheath. Keep about 15 mm of cable braid (foil).

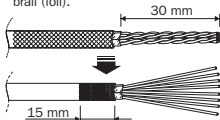


- 2** Release the keystone jack wire cap.

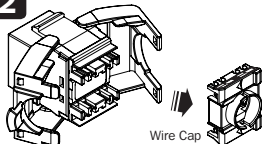


- 3** Pass the cable end through the wire cap. Set each color-coded wire to its matching color position on the cap. Use wire cutters to remove any excess wire.

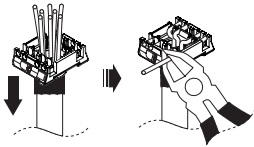

- 4** Ensure the wire cap is correctly aligned with the connector's latch tab. Press the wire cap into the jack and lock it in place.

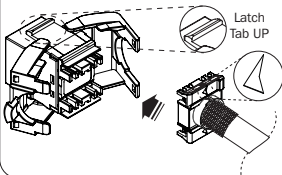


- 5** Run the included cable tie through the keystone jack slot and secure by tightening. Use wire cutters to remove any excess cable tie.

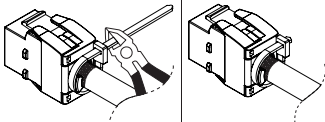


Note: To maximize performance with Power over Ethernet (PoE) applications, these keystone jacks are specifically designed to prevent spark gap erosion that degrades the plug and jack contacts over time and can impact data and/or power transmission capabilities.

To Disconnect:

- 1** Cut the cable tie.

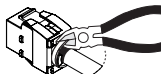

 - 2** Use a flathead screwdriver to unlock the keystone jack.



18-10-348 93-34AB_RevB