
## **SmartRack<sup>™</sup> Assembly Instructions**


## **Model: SRCEILING ADAPT**

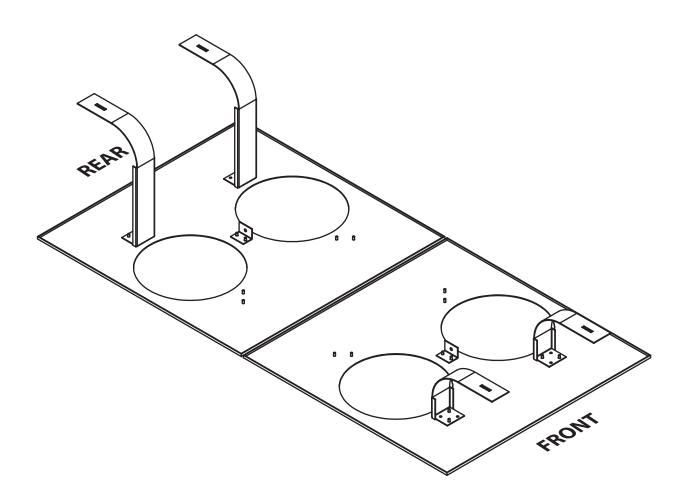







## **Parts List**

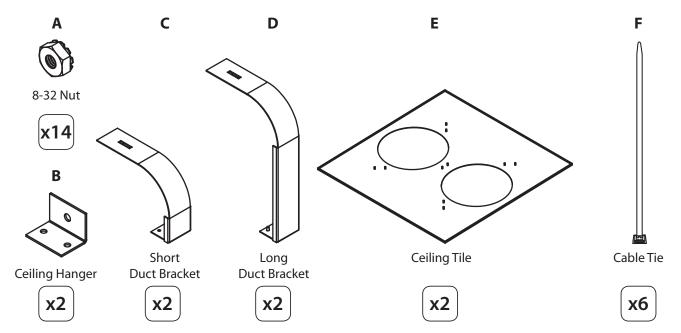


Required Tools:

• 3/8" Open End Wrench (User-Supplied)

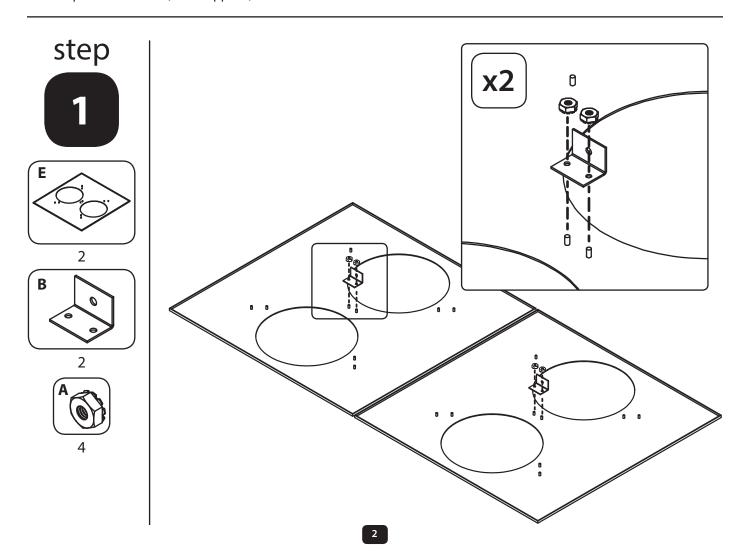

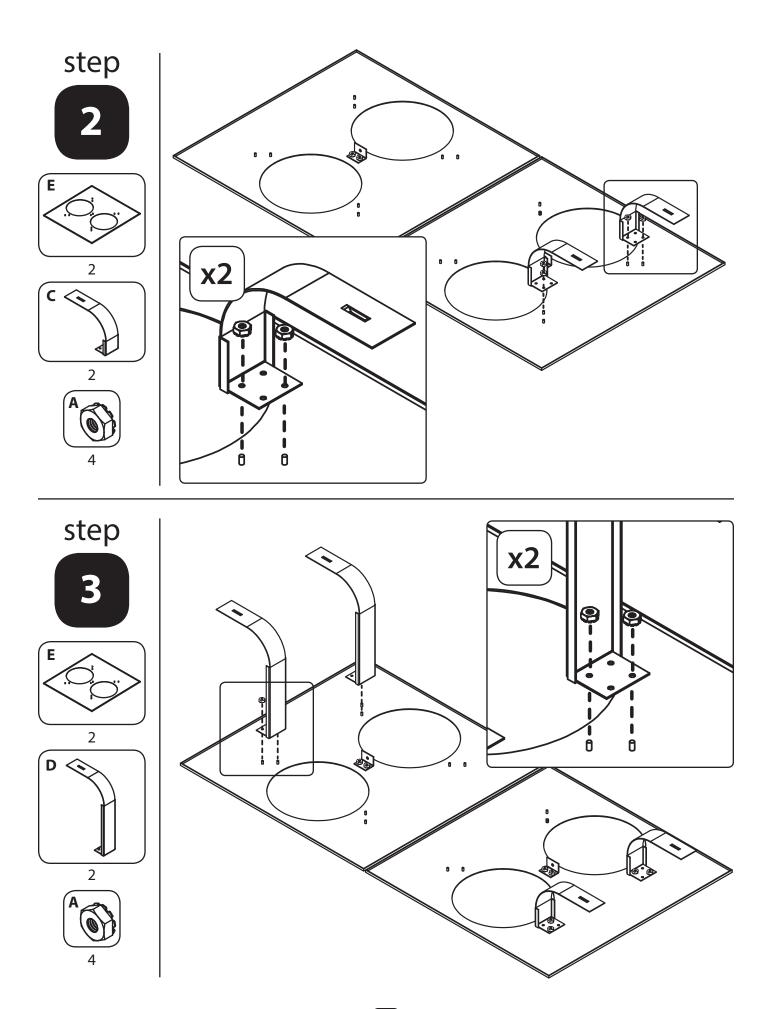

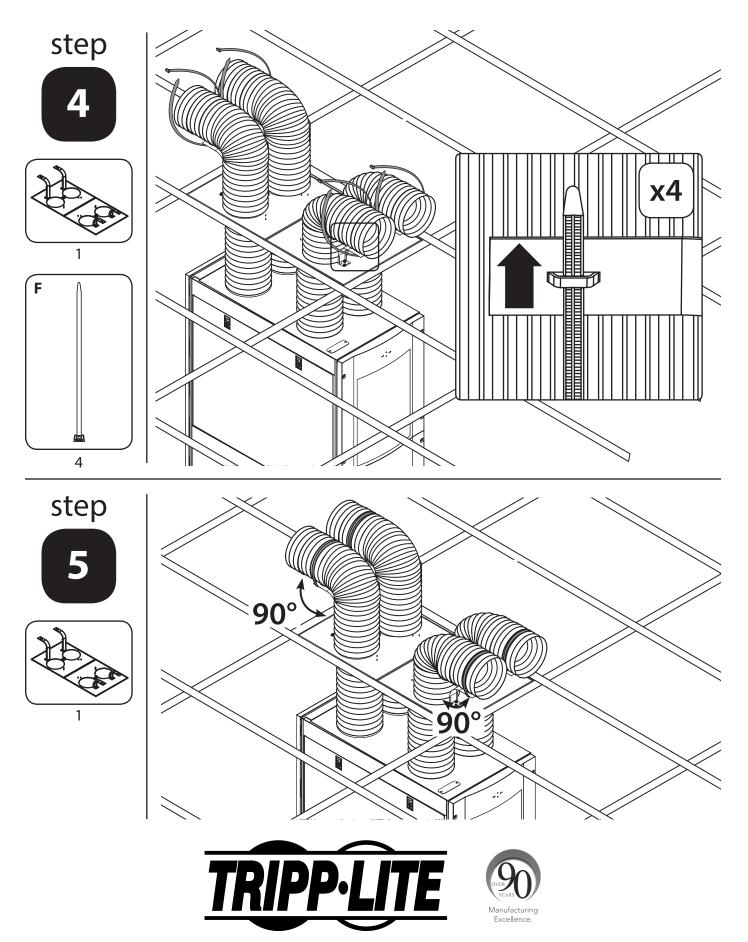

1111 West 35th Street, Chicago, IL 60609 USA • www.tripplite.com/support