

**WARRANTY
REGISTRATION**

Register online today for a chance
to win a FREE Tripp Lite product
www.tripplite.com/warranty




Addendum

Hardwiring the SU6000XFMR2U to the UPS PDU (SU6000RT4UTFHW)

Note: This operation is to be done with power completely disconnected and the PDU not attached to the UPS. Consult a qualified electrician for installation.

1. Remove the transformer terminal block cover.
2. Remove the transformer input cord.
3. Using the supplied cable, connect the black wire to L1, the white wire to L2 and the green/yellow wire to G on the transformer input.

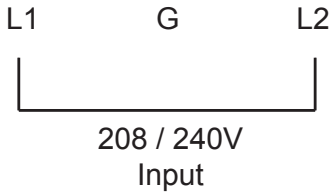

4. Secure the strain relief.
5. Install the terminal block cover.
6. Wire the transformer to the AC output on the PDU following the directions in the UPS manual (black to L1, white to L2 and green/yellow to the ground).



7. Secure the PDU Terminal Block and Strain Relief.



1111 W. 35th Street, Chicago, IL 60609 USA
www.tripplite.com

201011141 • 93-3078